

6' Spiral Slide with Hood (SS6,HP)


Step 1 —

Remove angle iron (attached for shipping purposes only) (**Figure 1 & 2**)

Figure 1



Figure 2

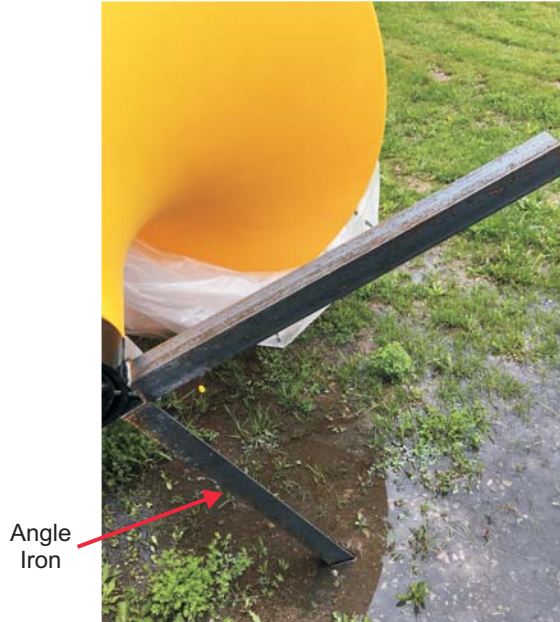

Step 2 —

Slide center post out to desired length. Bury in ground and concrete. (**Figure 3**)

Step 3 —

Once length of pipe is determined, tighten set screws provided on pipe. (**Figure 3**)

Figure 3

